



Installation Precautions

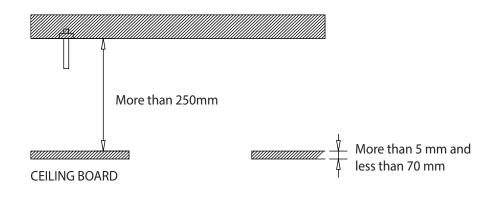


- Make sure that the installation place can endure at least 4 times of the total weight of the installation structure.
- At least 250mm or more of spare height is required above the CEILING BOARD.
- Be sure to secure the Safety Wire to avoid a product fall.
- Use the provided screws to install the Mount and camera.
- CEILING BOARD must be able to sustain the weight of at least 10 kg.



SHP-1563FW

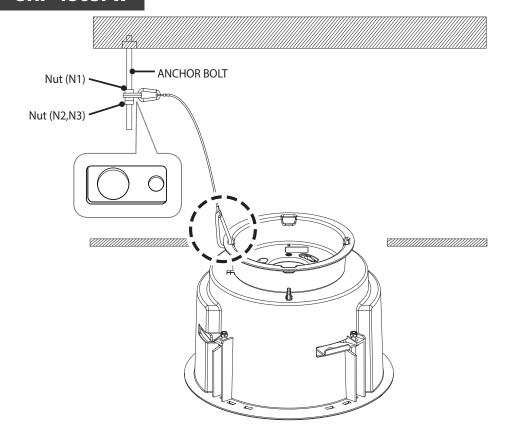

Package







SAFETY BRACKET (1EA)




SAFETY WIRE (1EA)

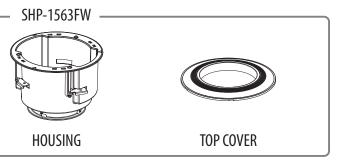

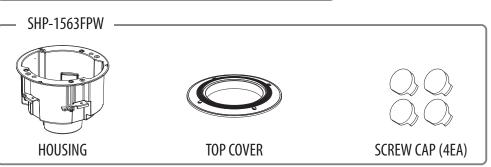


Installation

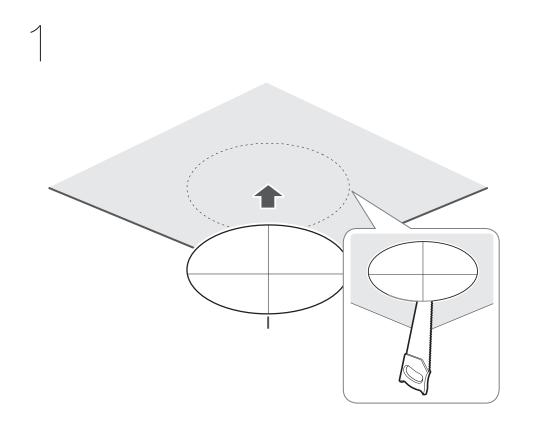



SHP-1563FPW

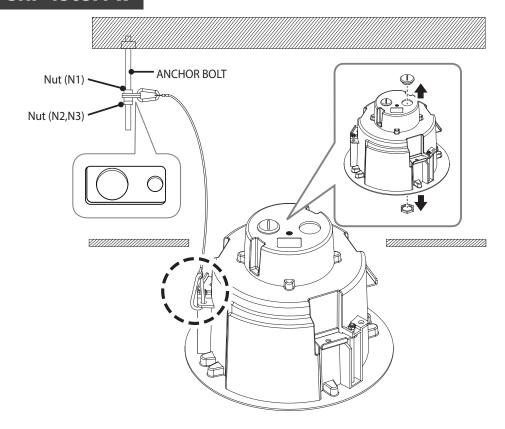

3

