
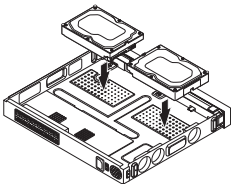


INSTALLING THE HDD

- 1
- If you are adding a new or previously used HDD to this product in addition to the HDD(s) originally installed, format the new HDD manually in the set before use.
  - If you wish to replace or add an HDD, contact your dealer or our customer service first.


ARN-1610S

- 1
- 2
- Loosen the screws on the side and back and slide the cover back to remove it.
- Connect the SATA/power cable of the hard disk to the connector of the main board.

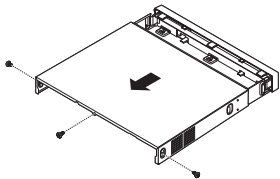


- !
- Gently press the connector before removing the HDD. Do not force to pull the cable.

- 3
- Use the screws to fix the hard disk to the bottom of the recorder.


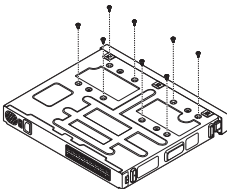


- 4
- Make sure that there is no problem in the connection port and routing inside the recorder, and then fix it using screws after closing the cover.
- When closing the cover, be careful not to damage the cable.

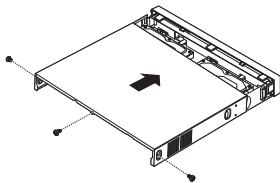


ARN-410S/ARN-810S

- 1
- 2
- Loosen the screws on the back and slide the cover back to remove it.
- Connect the SATA/power cable of the hard disk to the connector of the main board.

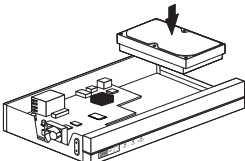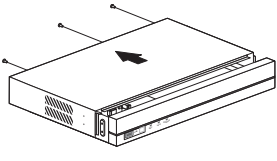


- !
- Gently press the connector before removing the HDD. Do not force to pull the cable.

- 3
- Use the screws to fix the hard disk to the bottom of the recorder.

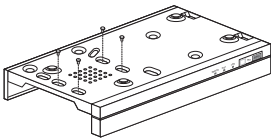

- 4
- Make sure that there is no problem in the connection port and routing inside the recorder, and then fix it using screws after closing the cover.
- When closing the cover, be careful not to damage the cable.

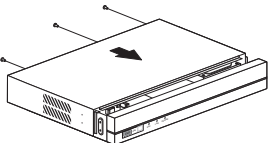

CAUTION

- RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
- Do not ingest battery, Chemical Burn Hazard.
- This product contains a coin / button cell battery. If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part or the body, seek immediate medical attention.

ATTENTION

- ILY A RISQUE D'EXPLOSION SI LA BATTERIE EST REMPLACÉE PAR UNE BATTERIE DE TYPE INCORRECT. METTRE AU REBUT LES BATTERIES USAGÉES CONFORMÉMENT AUX INSTRUCTIONS.
- Ne pas ingérer la pile, risque de brûlure chimique.
- Ce produit contient une pile de type bouton/pièce de monnaie. Si la pile de type bouton/pièce de monnaie est avalée, elle peut causer de graves brûlures internes en seulement 2 heures et peut entraîner la mort.
- Gardez les piles neuves et usagées hors de portée des enfants. Si le compartiment de la pile ne se ferme pas correctement, cessez d'utiliser le produit et gardez-le d'atteinte des enfants. Si vous suspectez que des piles ont été avalées ou insérées dans une partie du corps, consultez un médecin sans tarder.



Hanwha Techwin cares for the environment at all product manufacturing stages, and is taking measures to provide customers with more environmentally friendly products. The Eco mark represents Hanwha Techwin's devotion to creating environmentally friendly products, and indicates that the product satisfies the EU RoHS Directive.



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)  
This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.



Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery return systems.)  
This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.  
To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.



PACKAGE CONTENTS

- The appearance of the components may differ from the image shown.
- Accessory category and quantity may differ depending on sales region.
- For some regions, HDD is not pre-installed. HDD Fixing Screw, SATA Cable quantity vary depending on the model.

ARN-410S/ARN-810S

Recorder	Mouse	Power Cable
Power Adaptor	Quick Guide	HDD Fixing Screw (4 ea) (For models having no installed HDD)
SATA Power Cable (For models having no installed HDD)		

ARN-1610S

Recorder	Mouse	Power Cable
Quick Guide	HDD Fixing Screw (8 ea) (For models having no installed HDD)	SATA Power Cable (For models having no installed HDD)

INSTALLATION WIZARD SETUP

As shown below, proceed through each step of the <Installation wizard>. Install Wizard can only be accessed at factory reset. If you do not want to proceed, click <Exit>.

- You can set the install wizard on the recorder and web viewer. Refer to the User Manual for instructions on how to set up the install wizard on the web viewer.
- When you complete installation using the install wizard on your recorder, the install wizard will not appear on your web viewer.

1 Select the language


Select your preferred language.

2 Network Settings

- DHCP server : If the DHCP server is set to enable, an IP is automatically assigned to the camera.
- Network 1 (Camera) : Port for camera connections; it receives video from a camera.
- Network 2 (All) : Network for a remote viewer (SSM, Smart Viewer, Webviewer)
- Network 1 (Camera) / Network 2 (All) Setup
  - IP Type : Choose the network connection method.
  - IP Address, Subnet Mask, Gateway, DNS
- Camera registration method : This function is only available for products that support PoE.
  - Enable PnP mode: Cameras connected to the PoE port of the product will automatically be registered for each channel in order of port number.
    - When the camera resets to factory default, it defaults to the ID and password set during the <Camera ID/PW> step.
    - If the camera's ID and password have already been set, the information that matches the ID and password set during the <Camera ID/PW> step will be registered (up to 3 sets).
    - If your camera uses a manual IP, its bandwidth should match with that of Network 1 IP for registration.
    - If the PnP mode is not used, automatically detects and registers camera connected to the product's PoE port and camera with separate switch.
- Enable online upgrade: You can receive a new firmware notification when the recorder is connected to a network.

※ For more details on network settings, refer to the User manual.

► To use a simple intranet, click <Next>.

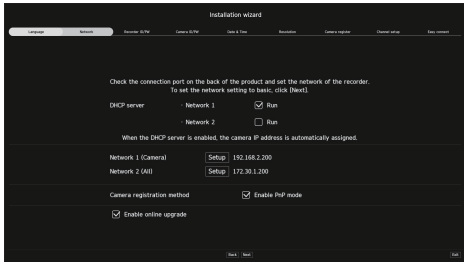


3 Recorder ID/PW Setup

Sets the administrator's password.

4 Camera ID/PW Setup

4-1. Set a camera password in factory reset. The initial password for the camera must be entered.

4-2. If ID/PW is already set in the camera, register the ID/PW and click <Next>.

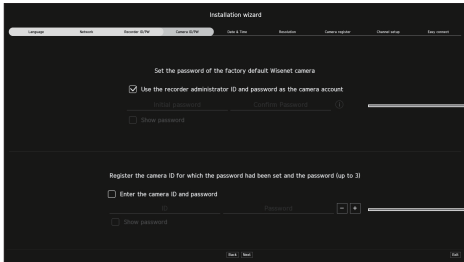

- ※ Click <1> to view the basic guide for setting a password. Refer to the password setup rules.
- ※ When the password is in factory reset, it can be changed and managed in a batch.
- ※ Up to 3 sets of camera ID with password and password can be registered.
- ※ You may change the passwords of registered cameras all at once in the "Setup > Camera > Camera password" menu.
- ※ You cannot change the password for cameras registered with ONVIF and RTSP.

5 Date & Time Setup

Set the date, time, time zone, and DST and then click <Next>.

6 Resolution Setup

To set the recommended resolution, click <Apply> followed by the <Next> button.


7 Camera Register

Registers the searched network cameras.

7-1 Select a camera to register from the searched camera list and click <Register>.

7-2 Select a camera to register from the list and click <Change IP>.

7-3 After completing camera register, click <Next>.

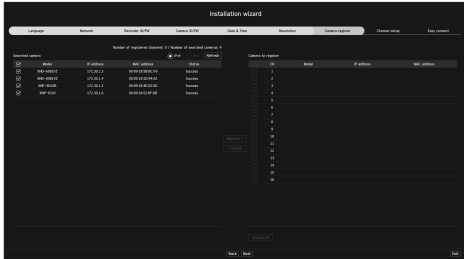

NETWORK VIDEO RECORDER

Quick Guide

ARN-410S/ARN-810S/ARN-1610S




Head Office  
6, Pangyo-ro 319 beon-gil, Bundang-gu, Seongnam-si,  
Gyeonggi-do, 463-400 Rep. of KOREA  
Tel : +82.70.7147.8753 Fax : +82.31.8018.3740  
http://hanwha-security.com

Hanwha Techwin America  
500 Frank W. Burr Blvd. Suite 43 Teaneck, NJ 07666  
Toll Free : +1.877.213.1222 Direct : +1.201.325.6920  
Fax : +1.201.373.0124  
www.hanwhasecurity.com

8 Channel Setting

You can view the camera videos registered to each channel in split mode along with thumbnail information. To change the camera video position, select a video and drag and drop it to the desired location. After completing channel setup, click <Next>.

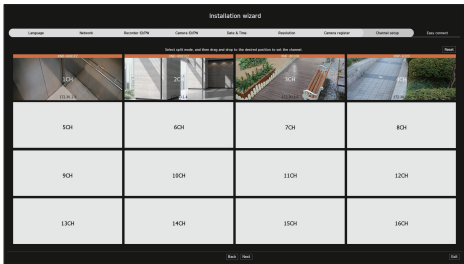


9 Easy connect

A remote user can network a recorder in a dynamic IP system.

Click <Enable> to test the connection to see if the current recorder can be connected remotely. When the connection is successful, a QR code is created.

To connect a recorder via a viewer, select the viewer you want to use. You can check the connection method of the selected viewer in the popup window.

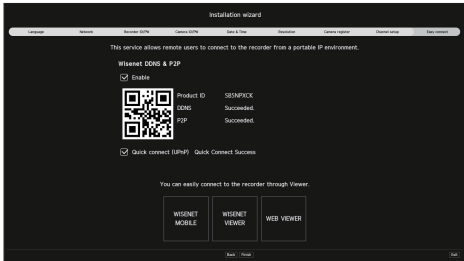


- ※ It connects to Wisenet DDNS first. If it does not connect to DDNS, it automatically connects to P2P.

10 Click <Finish> to complete the Installation wizard.

## EXPLORE SCREEN CONFIGURATION

The recorder screen consists of the following.

The screen may be configured differently depending on the menu selected by the user.

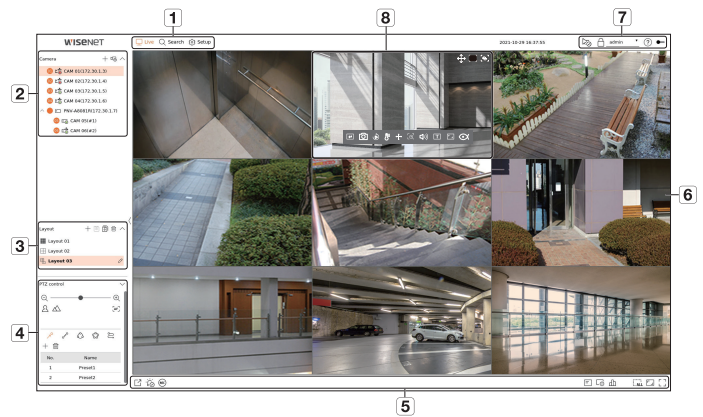


No.	Screen configuration	Detailed description of function
1	Menu	Clicking on each menu takes you to the corresponding menu screen.
2	Camera List	Displays list of registered cameras in the recorder. You can also register the camera manually or automatically.
3	Layout List	This displays a list of the default layouts and the layouts that have been created. You can set and play sequence on the list of layouts.
4	PTZ Control	Controls the connected PTZ camera.
5	Function buttons	Function that is frequently or urgently used. (Export, Turn off all notifications, Manual recording, OSD show/hide, Channel info, Status, Remove all tiles, Full aspect ratio, Full screen)
6	Video window	Shows the video of the camera connected to the recorder.
7	Display system status and additional functions	<ul style="list-style-type: none"><li>Displays the status of the system, hard disk, and network.</li><li>Displays the IP address and mutual authentication status of the viewer receiving the video from the recorder.</li><li>The ID of the connected user is displayed.</li><li>Displays a QR code to download User Manual.</li><li>Changes the color theme of the screen.</li></ul>
8	Display events and functions to control videos	Displays events that occurred on the device and functions related to video control.

— 7 —

## RECORD SETUP

You can set resolution, IPS, and quality of recordings by channel, and by recording type of standard / event. You can check frame rates and data transfer amount of Full Frame and Key Frame recordings for each channel, and set the transfer limit for recordings.

### Setup > Record > Record setup

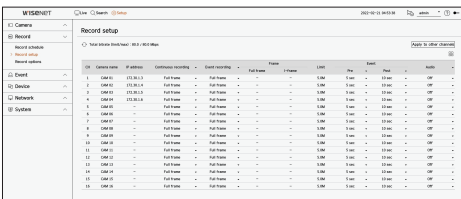

- Apply to other channels : If you select **<Apply to other channels>**, **<Apply to other channels>** confirmation window will appear. After selecting channels that the settings will be applied to, click on **<OK>** to apply them to the selected channels.
- : The camera of the corresponding channel is displayed on the list or as a thumbnail.
- Camera name : Displays the camera name.
- IP address : Displays the camera IP address.
- Continuous recording / Event recording : Set the recording method for Continuous recording or Event recording.
  - Full frame : Records all frames fed by the camera.
  - I-frame : Records only key frames fed by the camera. Depends on camera settings.
  - Off : No recording is made.
- Frame
  - Full frame : Shows the amount of data for all the scene recordings.
  - I-frame : Shows the amount of data for the main scene recordings.
  - Limit : Set the amount of data allowed for input for each channel.
- Event : When an event occurs, you can set which point you will start or stop recording.
  - Pre : When an event occurs, recording will be started regardless of the time set. If you set it to five seconds, recording will start at five seconds before an event occurs.
  - Post : When an event occurs, recording will continue after the time set. If you set it to five seconds, recording will continue for a further five seconds after an event is finished.
- Audio : Specify whether to record the sound received from the camera or not.

- If a channel's data transfer exceeds defined allowed limit, then it may affect to other channels, and may force switching to **<I-frame>** recording even when the channel is configured to **<Full frame>** recording mode. For Key Frame recording channels, the icon for limited recording appears on the live screen's top side. But if the sum of the limits is below the max limit, you can still receive the entire frames despite exceeding the permitted bitrates for each channel.
- A channel displayed in yellow indicates that the recorded data is not being transferred from the camera and that the recording is being performed temporarily using another profile on the camera. Check the channel information to see the applied profile to the channel listed in yellow. A channel displayed in orange indicates that the amount of inputted data is greater than the permitted data amount. In this case, it is impossible to record all of the incoming frames. Instead, only part of the frames (1 or 2 frames per second) can be recorded. To resolve this issue, you must set the permitted data amount to be greater than the amount of inputted data.


— 8 —

## SET UP AND RUN THE LAYOUT


The layout set on the live screen can also be used for time search and can be searched and played according to the channel order and channel combination set by the user.

For more information on how to set each step, refer to the 'User Manual'.

### 1 Live channel layout setup

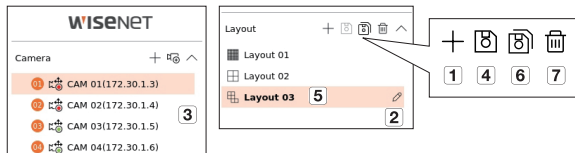


### 2 Search

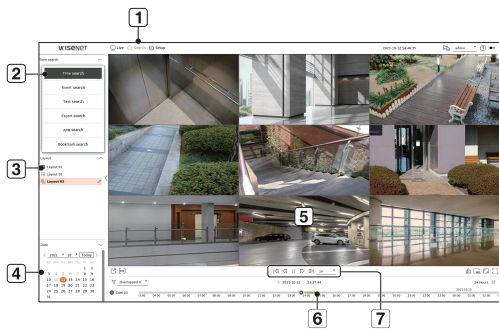


— 9 —

### 3 Play

When you start playing, the search date and play time are displayed, and you can search for recorded videos while controlling the play speed.

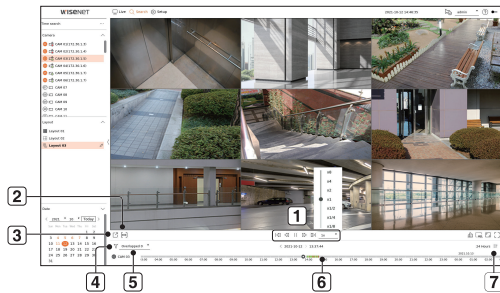

### 4 Export recorded video

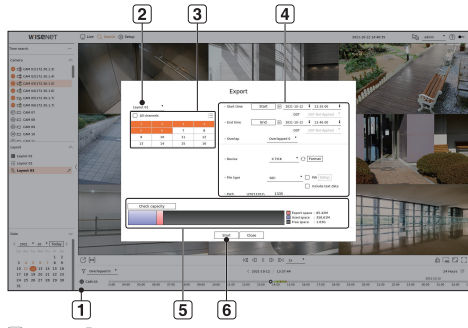


- 1 Click **<Export>** at the bottom of the screen.  
2 Select a layout.  
3 Select a channel.  
4 Set the time, device, and format for export.  
5 Click the **<Check capacity>** button to see if you can export.  
6 Click the **<Start>** button to proceed with the export.

— 10 —

## USING PRODUCT INFORMATION

You can check the product information/manual/firmware information/FAQ/HDD compatibility list on the homepage or mobile web of your smartphone.

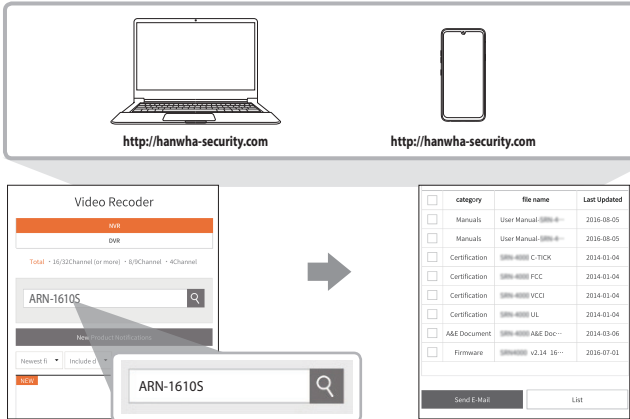

## USING WISENET DDNS & P2P SERVICE


A remote user can network a recorder using a DDNS address in a dynamic IP system. If you cannot connect with a dynamic IP, you can easily access using a P2P service.

### Accessing using DDNS address in the dynamic IP environment

In the dynamic IP environment such as xDSL/Cable modem, the router's WAN IP can be changed, so we provide DDNS (Dynamic Domain Name Server) service so that you can always access the recorder with only the DDNS address even in the dynamic IP environment.

Before using Wisenet DDNS & P2P, please set up network connection and DDNS first.

### Setting the Wisenet DDNS & P2P

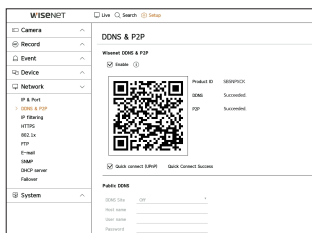

Click **<Enable>** to test the connection to see if the current recorder can be connected remotely. When the connection is successful, a QR code is created.

It connects to Wisenet DDNS first, and if it does not connect to DDNS, it automatically connects to P2P.

— 11 —

## Connecting to the Viewer

### To connect to the Wisenet mobile from your smartphone


- 1 Install and run the **"Wisenet mobile"** app on your smartphone. You can scan the QR code of the recorder on the **<Add device>** screen.
- 2 When the QR code is scanned, **<Product ID>** shown in the recorder is automatically reflected in the mobile viewer, and you can use the mobile viewer by entering the recorder ID/password.



- 3 From then on, when you run the **"Wisenet mobile"** app, it is automatically connected to the recorder and you can monitor it easily with your smartphone."

### To connect to the Wisenet Viewer from your PC

- 1 Go to <https://www.hanwha-security.com> on your PC. Install and run the **"Wisenet Viewer"** app.
- 2 Select **<IP type>** to **<DDNS/P2P>** in the **<Setup>** **<Device>** **<Device list>** **<Add>** **<Manual>** menu.
- 3 Enter the recorder ID/password and **<Product ID>**, and then click **<Register>**. The information of the current recorder is displayed, and you can use the **"Wisenet Viewer"** app.

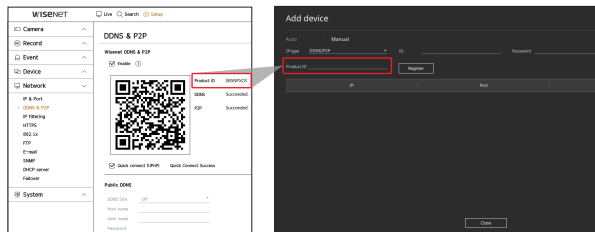

— 12 —

### To connect to the WebViewer from your PC

If you connect to <http://ddns.hanwha-security.com/product ID> including **<Product ID>** in the local PC address bar, the recorder's web viewer screen will appear.




## CONNECTING TO A NETWORK USING A ROUTER

If you want to add 1-3 PCs and recorders in an environment using xDSL/Cable modem, you can use the router with only one Internet line.

This guide is an installation guide for network beginners. Follow the instructions to set up your router, local PC, and recorder.

### Connecting the cable

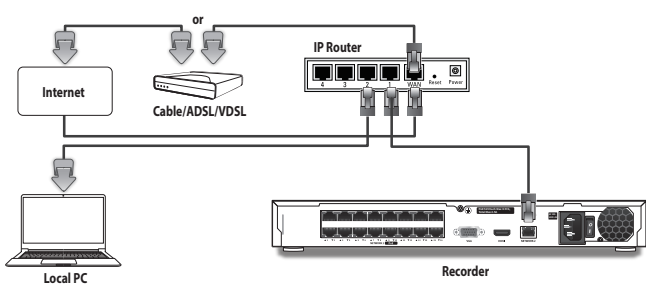

### Connecting a router with PC

Refer to the router's user manual.

### Connecting a recorder and a router

Move to **<IP & Port>** of the Recorder **<Network>** Setting menu, and set the **1 <IP address>** and **2 <Gateway>** in **<Setup>**.

- ※ The **<Default gateway>** checked on the **<cmd.exe>** window of the local PC and the **<Gateway>** of the recorder must be the same.
- ※ At least the third number of the recorder **<IP address>** should be set to be the same as the **<Default gateway>** checked on the **<cmd.exe>** window of the local PC.

— 13 —

### Checking the recorder connection from the PC

Enter the IP set in the recorder menu in the local PC address bar. Once you log in by entering your user name and password, the recorder's web viewer screen appears.



### System requirements

The following lists the minimum suggested hardware and operating system requirements needed to run the Web Viewer.

- Use the browser recommended by the OS.  
Ex.) Microsoft recommended browser: Microsoft Edge
- Supported browsers : Chrome, Edge, and Safari
- Supported OS : Works on all of the Windows, Linux, and OS X environments given the platform-independent nature of the web.
- Tested environments : Tested and certified to run on Windows® 10 with Edge 91, Google Chrome™ 91 and Intel® Core™ i7-7700 processor 3.60 Ghz with NVIDIA® GeForce® GTX™ 1050 or Intel™ HD Graphics 630.
- Performance restrictions : The performance of users' CPU/GPU may impact the video playback performance of the web viewer. The video quality may decrease depending on the settings, such as high resolution or transfer bandwidth, when playing H.265 video in Chrome.

### Router and Internet connection setup

Since each router has a different connection method, check the settings for each router.

### Port forwarding on the router setup

Set up the router's port forwarding to connect to a PC or a recorder connected to the router's local LAN from outside.

- The recorder uses the **<RTSP port>**, **<HTTP port>**, **<HTTPS port>**, and camera proxy ports. You must set up port forwarding for all the ports you use.
- ※ If only **<HTTP port>** is set for port forwarding, **<RTSP port>**, which is a video transmission port, is connected, but no video is displayed.
  - ※ If only **<RTSP port>** is set for port forwarding, no connection is available because **<HTTP port>**, which is a web connection port, is connected. Refer to the router's user manual.

— 14 —